## **SCHEDULE**

Calculations of Pressure Conversion and Compressibility Conversion Factors

## PART II

## Calculation of Compressibility Conversion Factor

The compressibility factor is:

- (a) where the pressure of the gas at the meter does not exceed 2 bar, the number one; and
- (b) where that pressure exceeds 2 bar, the number given by the following formula, namely: 0.9978

1-0.00000226M

where

M=the number of millibars of that pressure.