

SCHEDULES

SCHEDULE 9

Ecodesign requirements for household washing machines and washer-dryers

Programme requirements

5. The eco 40-60 programme must be set as the default programme for automatic programme selection or any function maintaining the selection of a programme, or, if there is no automatic programme selection, must be available for direct selection without the need for any other selection such as a specific temperature or load.