**Status:** This is the original version (as it was originally made). This item of legislation is currently only available in its original format.

## SCHEDULE

## CLASSES OF FIREPLACE WHICH ARE EXEMPT

**1.** The fireplace must be installed, maintained and operated in accordance with the manufacturer's installation instructions IAV SE/EX 0737-4 511866 and Lighting instructions BAV SE/EX 0717-1 511865.

A permanent stop must be in place on the air inlet to prevent closure beyond a minimum air open position.